# **Operation Manual** Diva-Lite 41, 31, 21 LED





# **Diva-Lite LED DMX Systems**



DIV-L21XCUDiva-Lite 21 LED DMX Center, UnivDIV-L31XCUDiva-Lite 31 LED DMX Center, UnivDIV-L41XCUDiva-Lite 41 LED DMX Center, Univ

 
**Center Mount** 



DIV-L21XYU	Diva-Lite 21 LED DMX Yoke, Univ
DIV-L31XYU	Diva-Lite 31 LED DMX Yoke, Univ
DIV-L41XYU	Diva-Lite 41 LED DMX Yoke, Univ

Yoke Mount

### Included w/ all Diva-Lite Models



LVR-SL290-P Diva-Lite 21 Louver/HP, 90°

LVR-SL390-P Diva-Lite 31 Louver/HP, 90°

LVR-SL490-P Diva-Lite 41 Louver/HP, 90°

### Included w/ all Diva-Lite Center Mount Only



MTP-LBC Kino 41 Lollipop w/ Baby Receiver Curve (16mm)

### Included w/ all Diva-Lite Yoke Mount Only



7010055	Diva-Lite 21 Yoke Assembly
7010057	Diva-Lite 31 Yoke Assembly
7010059	Diva-Lite 41 Yoke Assembly

# Diva-Lite 31 LED DMX Kits



Diva-Lite 31 LED DMX Kit w/ Travel Case

KIT-DL31XU

Diva-Lite 31 LED DMX Kit w/ Travel Case, Univ

Kit Contents: 1 Diva-Lite 31 LED DMX Center 1 Travel Case

**Dimensions:** 45.5 x 16.5 x 9" (115.6 x 42 x 23cm) Weight: 33.1 lb (15kg)

# Diva-Lite 21 LED DMX Kits



Diva-Lite 21 LED DMX Kit w/ Travel Case **KIT-DL21XU** Diva-Lite 21 LED DMX Kit w/ Travel Case, Univ

**Kit Contents:** 1 Diva-Lite 21 LED DMX Center 1 Travel Case

**Dimensions:** 28.5 x 16 x 8.5" (72.4 x 40.6 x 21.6c Weight: 22.2 lb (10kg)

### Power



#### AC Input

The Diva-Lite LED is powered AC and includes an IEC connection. It also includes a 12ft power cord with a locking IEC connector.

It includes a built-in power supply with universal input from 100-240VAC.

#### Ambient Operating Temperature

The Diva-Lite LED is designed to operate at temperatures from 14°F to 104°F (-10°C to 40°C).

#### DC Input

The Diva-Lite LED can also be operated on 24VDC (input range 18-36VDC) through a 3-Pin XLR. The pin polarity is:

Pin # 1 – Ground Pin # 2 + 18-36VDC Pin # 3 not used



#### Note:

A low voltage warning will display if input DC voltage is under 18VDC. Photo example: **LOW VDC: 16** 

# **Mounting Procedures**



Mounted on a baby stand.



Mounted to pipe grid.



Note: When hanging in a studio, loop a safety cord through the metal ring provided on the back of the fixture.



Turn the knob to loosen or tighten the mount.



Lollipops are interchangeable.

MTP-LKino 41 Lollipop w/ 3/8" Pin (10mm)MTP-LBCKino 41 Lollipop w/ Baby Rcvr Curve (16mm)MTP-LBSKino 41 Lollipop w/ Baby Rcvr Short (16mm)

# **Baby Offset Arm**



**MTP-B41F** Kino Offset w/ Baby Receiver (16mm)





The Baby Offset Arm (MTP-B41F) allows fixtures to mount on the center of a stand or it can also be under slung from a baby stand to use as an up light.

# **Applying Louver**





The Louver is fastened to the fixture with 4 Velcro straps.

# SnapBag & SnapGrid








The SnapBag accessory (**DFS-FS31-S** & **DFS-FS21-S**) is a lightweight fabric tailor-made for the Diva-Lite LED. It slips over the fixture and is attached with straps. The reflective material intensifies the soft light. The removable Magic cloth or Grid cloth attaches to the inside with Velcro.



The SnapGrid accessory (**LVR-FS340-S** & **LVR-FS240-S**) is constructed of pre-stretched fireproof fabric with a built-in stainless steel frame. It unfolds and snaps into place. This model requires the use with the corresponding SnapBag; it is not designed to be used by itself.


## **Control Panel - White Mode**

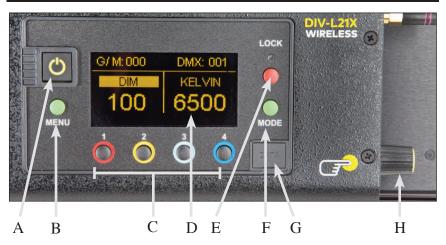

- A) On /Off: On = Green light displayed. Off = Red light displayed. The display and all menu settings can be operated while the power button is in the Off position, as long as power is applied to the controller. The On /Off button only controls the light source.
- B) Menu: Provides access to menu options such as General settings, Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (White, Gels & Hue, RGB, FX).
- **C) Preset Buttons:** Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin and G/M settings.
- **D) Display:** Provides access to Dim, Kelvin, G/M, and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.
- **E) Lock:** Press the **Lock** button to disable all buttons and Control knob. Press for 3 seconds to restore displayed presets to default factory settings.
- F) Mode: Press to navigate from Dim to Kelvin and G/M settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut: Long press will bring you back one step.
- G) Data Port: Mini B USB for firmware updates.
- H) Control Knob: Manually adjusts Dim, Kelvin, G/M levels and DMX address. Press the Control knob to toggle between Fine and Coarse increments or when selecting options within menus.

**DMX Note:** Each LED Fixture has an **"AUTO TERMINATE"** feature. The last fixture that does not have an XLR cable attached to the DMX "Out" port will automatically terminate.

### **Control Panel - Gels/Hue Mode**

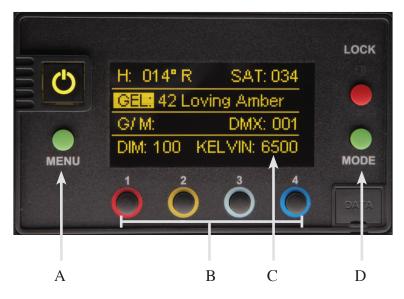

### Gels/Hue Mode

#### A) Menu:

Provides access to menu options such as General settings (**Gels/Hue** Mode), Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).

#### B) Preset Buttons:

Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, Gel, Hue and Saturation settings.


#### C) Display:

Provides access to Dim, Kelvin, G/M, Gel, Hue/Saturation and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.

#### D) Mode:

Press to navigate from Dim to Kelvin, G/M, Gel, Hue and Saturation settings. When on the Gel function, pushing the Control knob in/out will apply the gel or remove the gel. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut Tip: Long press will bring you back one step.

### **Control Panel - RGB Mode**

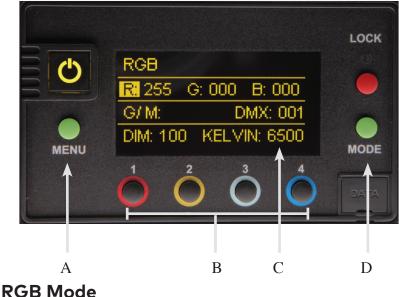

#### A) Menu:

Provides access to menu options such as General settings (**RGB Mode**), Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).

#### B) Preset Buttons:

Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, and RGB settings.


#### C) Display:

Provides access to Dim, Kelvin, G/M, RGB and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.

#### D) Mode:

Press to navigate from Dim to Kelvin, G/M, RGB settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut: Long press will bring you back one step.

### **Control Panel - FX (Effects)**

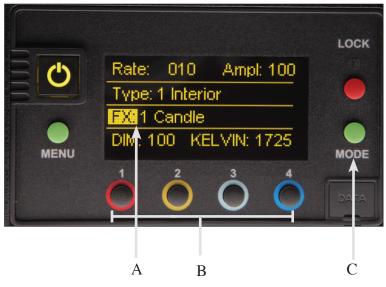

### FX (Effects) Mode

FX mode provides access to effects including Candle, Fire, TV, Police, Lightning, Paparazzi, Pulse and Scroll. Candle mode used as an example:

#### A) FX Option:

Choose the desired FX Mode by rotating the control knob. When on the desired effect, there will be several pre-programed effects as well as control parameters that can be altered.

#### B) Preset Buttons:

In FX Mode, **Kelvin** custom settings and any control functions displayed such as **Rate** and **Amplitude (Ampl)** can be saved as a preset. Chosen values can be assigned to any preset button by holding down the desired button for 3 seconds. The Kelvin display will flash once the setting is registered.

To restore presets to default factory settings, choose **Reset** under **General** settings and Clear Presets. This method will reset all buttons in all Modes. Shortcut: If only want to clear presets for **Candle** Mode, hold **Lock** button for 3 seconds while Candle mode is displayed.

#### C) Mode:

Press to navigate from Dim to Kelvin and FX settings. Shortcut: Long press will bring you back one step.

# Accessories







DFS-FS41-S DFS-FS31-S DFS-FS21-S	Diva-Lite 41 SnapBag w/ 2 x Diffusion Diva-Lite 31 SnapBag w/ 2 x Diffusion Diva-Lite 21 SnapBag w/ 2 x Diffusion
LVR-FS440-S	Diva-Lite 41 SnapGrid 40°
LVR-FS340-S	Diva-Lite 31 SnapGrid 40°
LVR-FS240-S	Diva-Lite 21 SnapGrid 40°
LVR-SL490-P LVR-SL460-P	Diva-Lite 41 Louver/HP 90° Diva-Lite 41 Louver/HP 60°
LVR-SL390-P LVR-SL360-P	Diva-Lite 31 Louver/HP 90° Diva-Lite 31 Louver/HP 60°
LVR-SL290-P LVR-SL260-P	Diva-Lite 21 Louver/HP 90° Diva-Lite 21 Louver/HP 60°




Lollipops are interchangeable.

MTP-L	Kino 41 Lollipop w/ 3/8" Pin (10mm)
MTP-LBC	Kino 41 Lollipop w/ Baby Rcvr Curve (16mm)
MTP-LBS	Kino 41 Lollipop w/ Baby Rcvr Short (16mm)

## Cases



KAS-DL31-C	Diva-Lite 31 Travel Case
KAS-DL21-C	Diva-Lite 21 Travel Case

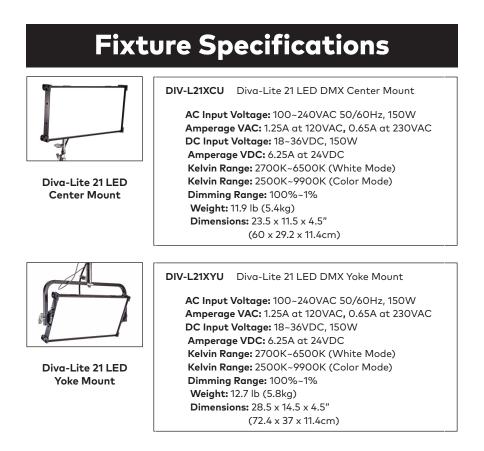



#### FCC Part 15 Verification:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

#### FCC Part 15 Declaration of Conformity:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



KINO FLO, INC Diva-Lite 21, Diva-Lite 31, Diva-Lite 41 ID: XRSCRMXTIMO101 IC: 8879A-CRMXT101

For full operation manual, latest Warranty information and Certifications,

see Kino Flo website at www.kinoflo.com.



#### Environmental: Disposal of Old Electrical & Electronic Equipment.



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. This product is made of recyclable materials and should be disposed of in accordance with governmental regulations.

Kino Flo, Inc. 2840 N. Hollywood Way, Burbank, CA 91505, USA Tel: 818 767-6528 website: www.kinoflo.com