


1. WHAT'S IN THE BOX & THE BASICS

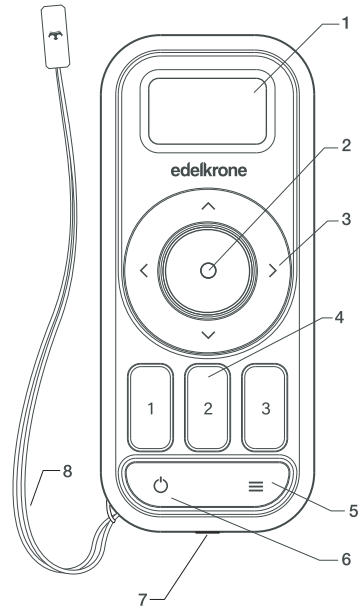


- | | |
|-----------------------|------------------|
| 1. Information screen | 5. Menu button |
| 2. Select button | 6. On/Off button |
| 3. Menu Navigation | 7. Link port |
| 4. Keypose buttons | 8. Wrist Strap |

TABLE OF CONTENTS



1. WHAT'S IN THE BOX & THE BASICS
2. ATTACHING BATTERY
3. START USING
4. PAIRING SCREENS
5. AXIS & KEYPOSE SETTINGS
6. SPEED & ACCELERATION SETTINGS
7. ON/OFF BUTTON & MENU SCREEN

2. ATTACHING THE BATTERY

To put batteries on, pull the cover from **pull** sign. The battery cover will be opened. Insert batteries in the right direction as shown in battery capsule.

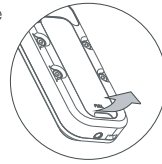


x2
AAA
Battery

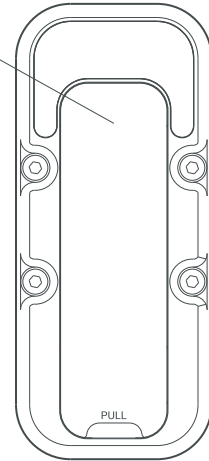 

*Batteries sold separately.

3. START USING

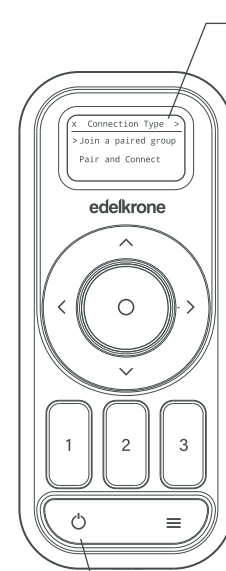

- ① To switch the Controller on, Hold On/Off button down for a second.

- ② On the opening screen;


There are two connection types.
-Join a Paired Group
-Pair and Connect

In Pair and Connect,
You can select edelkrone devices from the active devices list to connect.

In Join a Paired Group,
If you have already paired the devices, you can join a paired group on this option.

Select a connection type by using direction buttons and press the Select button.


4. PAIRING SCREENS

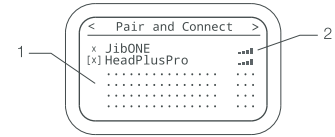

1. Available Devices List 2. Connection Signal of the devices

Pair and Connect Screen

To pair the devices, mark the devices you want to pair by pushing the Select button. Then, push the right navigation button to go to the control screen.

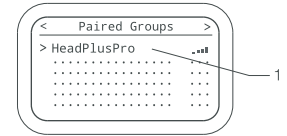


1. The master device of the paired group

Join a Paired Group Screen

If you already have paired devices, the master of the paired group shows up on the list. To join a paired group, mark the group by pushing the Select button. Then, push the right navigation button to go to the control screen.

*Based on your firmware, you can get the latest guide from edel.kr/ctrlr or the QR code on pg.7

5. AXIS & KEYPOSE SETTINGS

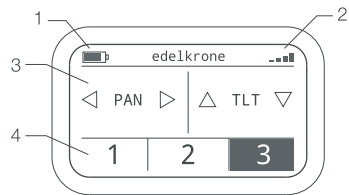

1. Battery Level Indicator 3. Pan-Tilt Settings
2. Connection Indicator 4. Keyposes


A. Axis Control Screen

You can adjust pan & tilt, swing, slide and focus movements on this section by using **navigation buttons**.


You can switch axis selection by pushing **select button**.

Keyposes

Under the Pan and Tilt settings, there are 3 keypose slots.

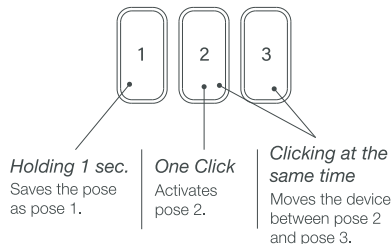

6. SPEED & ACCELERATION SETTINGS

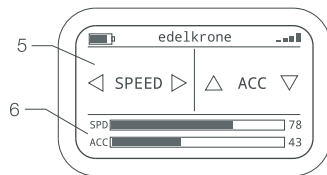


5. Speed-Acc. Settings 6. Speed-Acc. Level

B. Speed & Acceleration Control Screen

You can adjust Speed and Acceleration on this section by using navigation buttons.

To start motion, push the keypose buttons you have saved.

C. Loop Screen

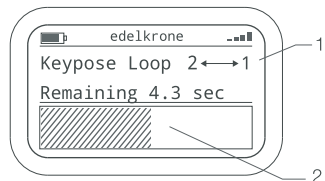

1. Moving Keypose or Loop Navigation 2. Moving Time

7. ON/OFF BUTTON & MENU SCREEN



On/Off Button


To switch off, Hold On/Off button down until the shutdown text disappears.

Menu Button

You can go to the menu by pushing the menu button on any screen.

Menu Screen

On this screen, there are 3 options;

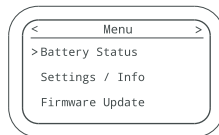

-Battery Status

In this section, you can check your controller's and connected devices' battery level.

-Settings / Info

In this section, you can set Auto Power Off and Auto Power Saving time and check out detailed informations about the Controller. (Serial number, version etc.)

-Firmware Update

When your smartphone says there is a firmware update, go to Menu/Firmware Update and follow steps on edelkrone app.

Based on your firmware, there may be minor differences in the product interface you have. You can get the latest guide from edel.kr/fw-ctrlr or the QR.



DISPOSAL OF THE PRODUCT & WARNINGS



Should the product become damaged beyond repair, or if you wish to dispose of it, it must be disposed separately from the municipal waste stream via

designated collection facilities appointed by the government or the local authorities. Observe the regulations of your area and country that relate to the disposal of electronic products.

* Keep your electronic unit away from all sorts of liquids.
* In order to preserve your Controller and battery performance at their best, use the exact same type of batteries.

* Do not attempt to disassemble or modify any internal parts of your Controller. If the device appears to be malfunctioning, stop using immediately and contact support for qualified service.

* Never force a different type of connector into the link port.

* Never use or store your Controller in areas subject to extreme temperatures, or high levels of vibration.

* If your Controller becomes unresponsive, disconnect and re-connect the power source. Make sure your batteries are properly charged. If the problem persists, contact our support team.

* Environmental factors may affect your Controller's performance. Keep your product away from environmental hazards such as dust or heavy resonance. Do not use chemical materials to clean your product.

* Use of an inappropriate power source may permanently damage your Controller.

* Avoid dropping or causing physical damage to your Controller.

**edelkrone cannot be held responsible for damage caused by improper use or modification of the product.

* Rated Voltage: 2.4V (2x1.2V AAA Battery)
Rated Current: 0.5A
Operating Temperature: -5°C to +45°C

edelkrone
CONTROLLER

USER'S MANUAL

Before operating your edelkrone, please watch the user's manual video from the link below

<http://edel.kr/ctrlr>

