

Quick Start Guide

Diva-Lite 41, 31, 21 LED

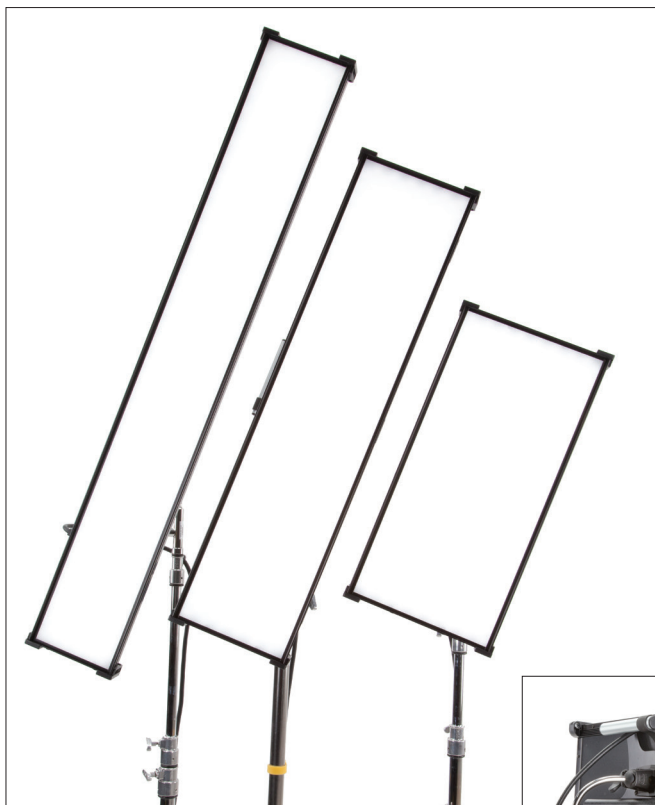

KINO FLO
Lighting Systems

Divalite LED DMX Systems



Center Mount

DIV-L21XCU Diva-Lite 21 LED DMX Center, Univ

DIV-L31XCU Diva-Lite 31 LED DMX Center, Univ

DIV-L41XCU Diva-Lite 41 LED DMX Center, Univ




Yoke Mount

DIV-L21XYU Diva-Lite 21 LED DMX Yoke, Univ

DIV-L31XYU Diva-Lite 31 LED DMX Yoke, Univ

DIV-L41XYU Diva-Lite 41 LED DMX Yoke, Univ

Included w/ all Diva-Lite Models

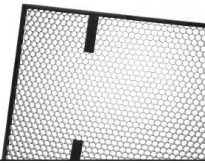

LVR-SL290-P Diva-Lite 21 Louver/HP, 90°

LVR-SL390-P Diva-Lite 31 Louver/HP, 90°

LVR-SL490-P Diva-Lite 41 Louver/HP, 90°

Included w/ all Diva-Lite Center Mount Only



MTP-LBC Kino 41 Lollipop w/ Baby Receiver Curve (16mm)

Included w/ all Diva-Lite Yoke Mount Only



7010055 Diva-Lite 21 Yoke Assembly

7010057 Diva-Lite 31 Yoke Assembly

7010059 Diva-Lite 41 Yoke Assembly

Power



AC Input

The Diva-Lite LED is powered AC and includes an IEC connection. It also includes a 12ft power cord with a locking IEC connector.

It includes a built-in power supply with universal input from 100-240VAC.

Ambient Operating Temperature

The Diva-Lite LED is designed to operate at temperatures from 14°F to 104°F (-10°C to 40°C).

DC Input

The Diva-Lite LED can also be operated on 24VDC (input range 18-36VDC) through a 3-Pin XLR. The pin polarity is:

Pin # 1 – Ground

Pin # 2 + 18-36VDC


Pin # 3 not used



Note:

A low voltage warning will display if input DC voltage is under 18VDC. Photo example: **LOW VDC: 16**

Control Panel - White Mode

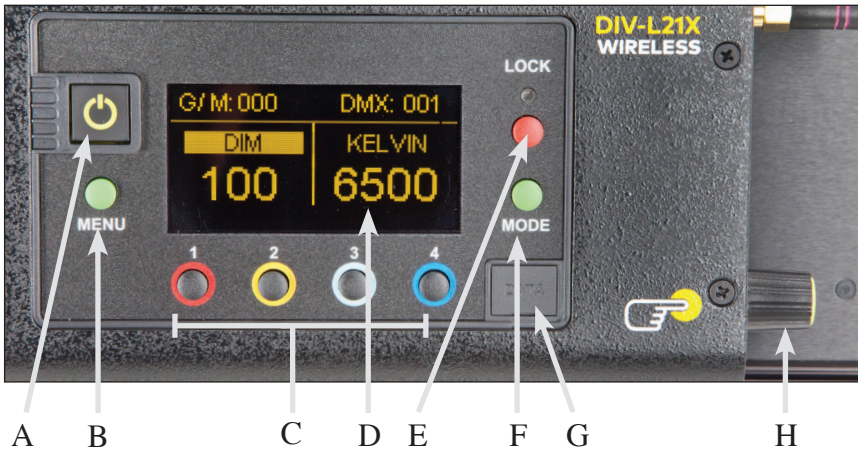

- A) On /Off:** **On** = Green light displayed. **Off** = Red light displayed. The display and all menu settings can be operated while the power button is in the Off position, as long as power is applied to the controller. The On /Off button only controls the light source.
- B) Menu:** Provides access to menu options such as General settings, Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).
- C) Preset Buttons:** Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin and G/M settings.
- D) Display:** Provides access to Dim, Kelvin, G/M, and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.
- E) Lock:** Press the **Lock** button to disable all buttons and Control knob. Press for 3 seconds to restore displayed presets to default factory settings.
- F) Mode:** Press to navigate from Dim to Kelvin and G/M settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut: Long press will bring you back one step.
- G) Data Port:** Mini B USB for firmware updates.
- H) Control Knob:** Manually adjusts Dim, Kelvin, G/M levels and DMX address. Press the Control knob to toggle between **Fine** and **Coarse** increments or when selecting options within menus.

DMX Note: Each LED Fixture has an **"AUTO TERMINATE"** feature. The last fixture that does not have an XLR cable attached to the DMX "Out" port will automatically terminate.

Control Panel - Gels/Hue Mode



Gels/Hue Mode

A) Menu:

Provides access to menu options such as General settings (**Gels/Hue Mode**), Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).

B) Preset Buttons:

Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, Gel, Hue and Saturation settings.


C) Display:

Provides access to Dim, Kelvin, G/M, Gel, Hue/Saturation and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.

D) Mode:

Press to navigate from Dim to Kelvin, G/M, Gel, Hue and Saturation settings. When on the Gel function, pushing the Control knob in/out will apply the gel or remove the gel. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut Tip: Long press will bring you back one step.

Control Panel - RGB Mode

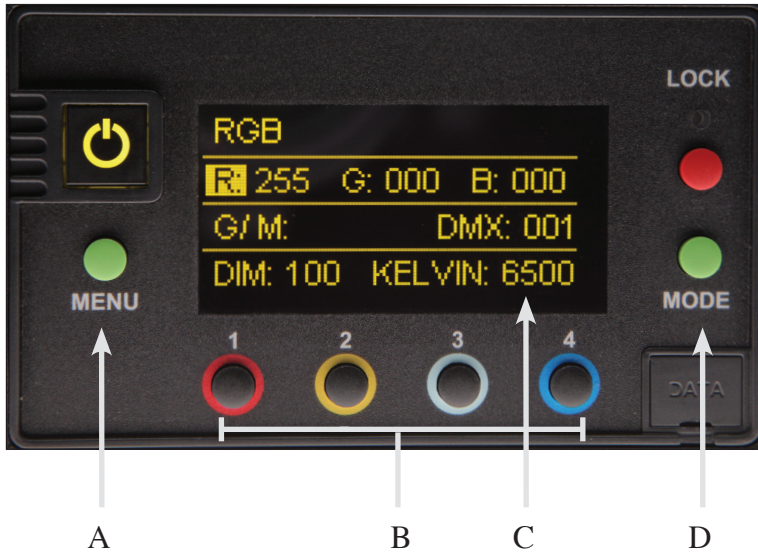

RGB Mode

A) Menu:

Provides access to menu options such as General settings (**RGB Mode**), Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).

B) Preset Buttons:

Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, and RGB settings.


C) Display:

Provides access to Dim, Kelvin, G/M, RGB and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.

D) Mode:

Press to navigate from Dim to Kelvin, G/M, RGB settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut: Long press will bring you back one step.

Control Panel - FX (Effects)

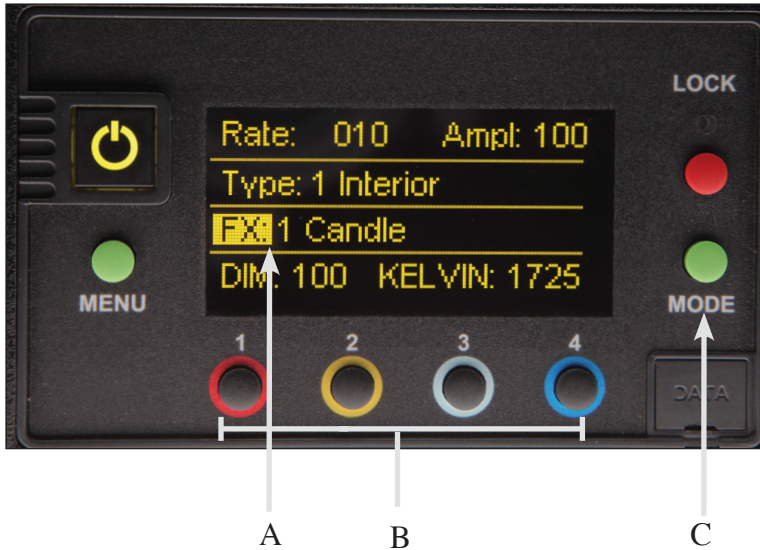

FX (Effects) Mode

FX mode provides access to effects including Candle, Fire, TV, Police, Lightning, Paparazzi, Pulse and Scroll. Candle mode used as an example:

A) FX Option:

Choose the desired FX Mode by rotating the control knob. When on the desired effect, there will be several pre-programmed effects as well as control parameters that can be altered.

B) Preset Buttons:

In FX Mode, **Kelvin** custom settings and any control functions displayed such as **Rate** and **Amplitude (Ampl)** can be saved as a preset. Chosen values can be assigned to any preset button by holding down the desired button for 3 seconds. The Kelvin display will flash once the setting is registered.

To restore presets to default factory settings, choose **Reset** under **General** settings and Clear Presets. This method will reset all buttons in all Modes. Shortcut: If only want to clear presets for **Candle** Mode, hold **Lock** button for 3 seconds while Candle mode is displayed.

C) Mode:

Press to navigate from Dim to Kelvin and FX settings.
Shortcut: Long press will bring you back one step.

Fixture Specifications



**Diva-Lite 21 LED
Center Mount**

DIV-L21XCU Diva-Lite 21 LED DMX Center Mount

AC Input Voltage: 100–240VAC 50/60Hz, 150W
Amperage VAC: 1.25A at 120VAC, 0.65A at 230VAC
DC Input Voltage: 18–36VDC, 150W
Amperage VDC: 6.25A at 24VDC
Kelvin Range: 2700K–6500K (White Mode)
Kelvin Range: 2500K–9900K (Color Mode)
Dimming Range: 100%–1%
Weight: 11.9 lb (5.4kg)
Dimensions: 23.5 x 11.5 x 4.5"
(60 x 29.2 x 11.4cm)



**Diva-Lite 21 LED
Yoke Mount**

DIV-L21XYU Diva-Lite 21 LED DMX Yoke Mount


AC Input Voltage: 100–240VAC 50/60Hz, 150W
Amperage VAC: 1.25A at 120VAC, 0.65A at 230VAC
DC Input Voltage: 18–36VDC, 150W
Amperage VDC: 6.25A at 24VDC
Kelvin Range: 2700K–6500K (White Mode)
Kelvin Range: 2500K–9900K (Color Mode)
Dimming Range: 100%–1%
Weight: 12.7 lb (5.8kg)
Dimensions: 28.5 x 14.5 x 4.5"
(72.4 x 37 x 11.4cm)



**Diva-Lite 31 LED
Center Mount**

DIV-L31XCU Diva-Lite 31 LED DMX Center Mount

AC Input Voltage: 100-240VAC 50/60Hz, 150W
Amperage VAC: 1.25A at 120VAC, 0.65A at 230VAC
DC Input Voltage: 18-36VDC, 150W
Amperage VDC: 6.25A at 24VDC
Kelvin Range: 2700K-6500K (White Mode)
Kelvin Range: 2500K-9900K (Color Mode)
Dimming Range: 100%~1%
Weight: 13.9 lb (6.3kg)
Dimensions: 37.5 x 9.5 x 4.5"
(95.3 x 24.1 x 11.4cm)

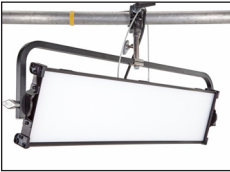

**Diva-Lite 31 LED
Yoke Mount**

DIV-L31XYU Diva-Lite 31 LED DMX Yoke Mount

AC Input Voltage: 100-240VAC 50/60Hz, 150W
Amperage VAC: 1.25A at 120VAC, 0.65A at 230VAC
DC Input Voltage: 18-36VDC, 150W
Amperage VDC: 6.25A at 24VDC
Kelvin Range: 2700K-6500K (White Mode)
Kelvin Range: 2500K-9900K (Color Mode)
Dimming Range: 100%~1%
Weight: 14.4 lb (6.5kg)
Dimensions: 42 x 12 x 4.5"
(106.7 x 30.5 x 11.4cm)



**Diva-Lite 41 LED
Center Mount**

DIV-L41XCU Diva-Lite 41 LED DMX Center Mount

AC Input Voltage: 100-240VAC 50/60Hz, 150W
Amperage VAC: 1.25A at 120VAC, 0.65A at 230VAC
DC Input Voltage: 18-36VDC, 150W
Amperage VDC: 6.25A at 24VDC
Kelvin Range: 2700K-6500K (White Mode)
Kelvin Range: 2500K-9900K (Color Mode)
Dimming Range: 100%~1%
Weight: 14.7 lb (6.7kg)
Dimensions: 49.5 x 7.5 x 4.5"
(125.7 x 19 x 11.4cm)



**Diva-Lite 41 LED
Yoke Mount**

DIV-L41XYU Diva-Lite 41 LED DMX Yoke Mount

AC Input Voltage: 100-240VAC 50/60Hz, 150W
Amperage VAC: 1.25A at 120VAC, 0.65A at 230VAC
DC Input Voltage: 18-36VDC, 150W
Amperage VDC: 6.25A at 24VDC
Kelvin Range: 2700K-6500K (White Mode)
Kelvin Range: 2500K-9900K (Color Mode)
Dimming Range: 100%~1%
Weight: 15.3 lb (6.9kg)
Dimensions: 56 x 10 x 4.5"
(142.2 x 25.4 x 11.4cm)

FCC Part 15 Verification:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

FCC Part 15 Declaration of Conformity:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



KINO FLO, INC
Diva-Lite 21, Diva-Lite 31, Diva-Lite 41
ID: XRSCRMXTIMO101
IC: 8879A-CRMXT101

For full operation manual, latest Warranty information and Certifications,
see Kino Flo website at www.kinoflo.com.



Environmental: Disposal of Old Electrical & Electronic Equipment.



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. This product is made of recyclable materials and should be disposed of in accordance with governmental regulations.

Kino Flo, Inc. 2840 N. Hollywood Way, Burbank, CA 91505, USA
Tel: 818 767-6528 website: www.kinoflo.com