


---

# Quick Start Guide

## FreeStyle 31/21 LED Select 30/20 LED

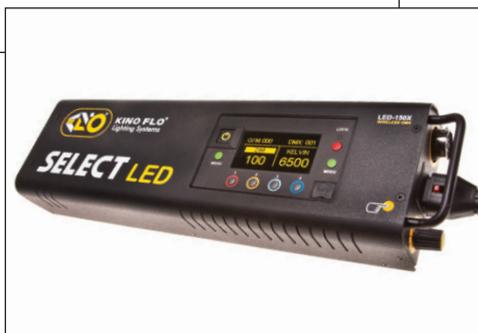

**KINO FLO**  
Lighting Systems

# FreeStyle 31 & 21 LED Systems



**SYS-F31-120U** FreeStyle 31 LED DMX System, Univ 120U  
**SYS-F31-230U** FreeStyle 31 LED DMX System, Univ 230U

**SYS-F21-120U** FreeStyle 21 LED DMX System, Univ 120U  
**SYS-F21-230U** FreeStyle 21 LED DMX System, Univ 230U

For available Kits & contents, see [www.kinoflo.com](http://www.kinoflo.com)

## Each FreeStyle LED System consists of:

- 1 FreeStyle LED Fixture
- 1 Mounting Plate
- 1 Extension Cable
- 1 LED Controller

# FreeStyle LED System Components



**CFX-F31** FreeStyle 31 LED Fixture


**CFX-F21** FreeStyle 21 LED Fixture



**MTP-BG41** KinoGrip 41K Mount w/  
Baby Receiver (16mm)



**X12-25** Select 150 Extension, 25ft

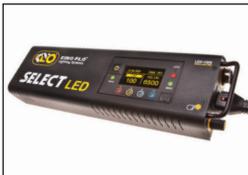

**LED-150X-120U**  
Select 150 LED DMX Controller, Univ 120U

**LED-150X-230U**  
Select 150 LED DMX Controller, Univ 230U

# Select 30 & 20 LED Systems



**SYS-S30-120U** Select 30 LED DMX System, Univ 120U  
**SYS-S30-230U** Select 30 LED DMX System, Univ 230U

**SYS-S20-120U** Select 20 LED DMX System, Univ 120U  
**SYS-S20-230U** Select 20 LED DMX System, Univ 230U

For available Kits & contents, see [www.kinoflo.com](http://www.kinoflo.com)

## Each Select LED System consists of:

- 1 LED Fixture
- 1 Mounting Plate
- 1 Extension Cable
- 1 LED Controller

# Select LED System Components



**CFX-SL30** Select 30 LED Fixture

**CFX-SL20** Select 20 LED Fixture



**MTP-BW41** Kino 41K Mount Wing w/  
Baby Receiver (16mm)



**X12-25** Select 150 Extension, 25ft



**LED-150X-120U**  
Select 150 LED DMX Controller, Univ 120U

**LED-150X-230U**  
Select 150 LED DMX Controller, Univ 230U

# Power



## AC Input

The Select 150 LED DMX Controller is powered AC and includes an IEC connection. It also includes a 12ft power cord with a locking IEC connector.

The Select 150 LED DMX Controller has a built-in power supply with universal input from 100-240VAC.

## Ambient Operating Temperature

The Select 150 LED DMX is designed to operate at temperatures from 14°F to 104°F (-10°C to 40°C).



## DC Input

The Select 150 LED DMX can also be operated on 24VDC (input range 18-36VDC) through a 3-Pin XLR. The pin polarity is:

- Pin # 1 – Ground
- Pin # 2 + 18-36VDC
- Pin # 3 not used



## Note:

A low voltage warning will display if input DC voltage is under 18VDC. Photo example: **LOW VDC: 17**

# FreeStyle Fixture Assembly



The FreeStyle LED Fixture is comprised of a removable Fixture Shell, LED panel and Louver. The Louver is held in place with Velcro fasteners.



To remove the LED panel from the fixture housing, press the locking pin and turn thumbscrew to release LED panel.



Lift LED panel from metal tray.



Slide LED panel from fixed pins.

To replace, reverse the procedure.

# Removable Mount



Align the center pin of the mounting plate to the center hole on the mating plate.

Rotate plate clockwise until the four shoulder rivets drop into the receptacle. A locking pin will snap into place when the plate is properly seated.



The **yellow wire loop** provides an attachment point for a safety chain.




**To remove the plate**, pull up on the locking pin and reverse the mounting procedure.



The FreeStyle removable LED panel also has a mating plate to accept the twist-on mount plate.

# Control Panel - White Mode

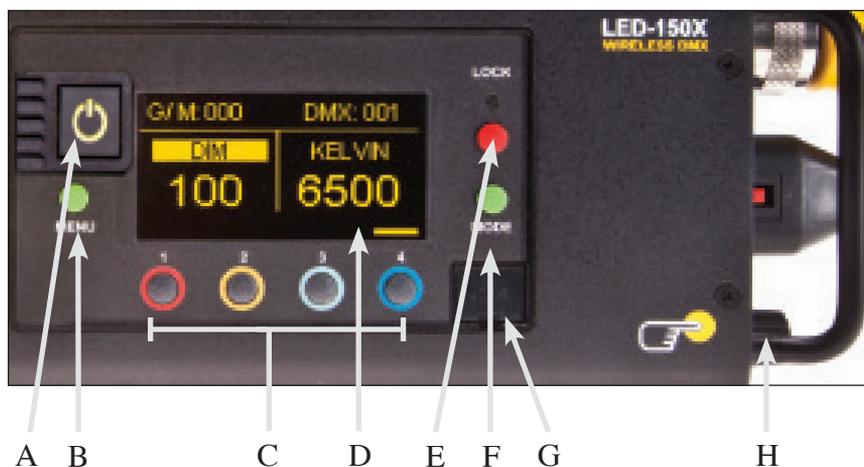

- A) On /Off:** **On** = Green light displayed. **Off** = Red light displayed. The display and all menu settings can be operated while the power button is in the **Off** position, as long as power is applied to the controller. The On /Off button only controls the light source.
- B) Menu:** Provides access to menu options such as General settings, Reset, DMX and DMX Wireless settings. *Tip:* While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB**).
- C) Kelvin & G/M (Green/Magenta) Preset Buttons:** Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin and G/M settings.
- D) Display:** Provides access to Dim, Kelvin, G/M, and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.
- E) Lock:** Press the **Lock** button to disable all buttons and control knob. Press for 3 seconds to restore presets to default factory settings.
- F) Mode:** Press to navigate from Dim to Kelvin and G/M settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. *Tip:* Long press will bring you back one step.
- G) Data Port:** Mini B USB for software updates.
- H) Dimmer Knob:** Manually adjusts Dim, Kelvin, G/M levels and DMX address. Press the knob to toggle between fine and coarse adjustments or when selecting options within menus.
- DMX Note:** Each FreeStyle/Select LED has an “**AUTO TERMINATE**” feature. The last fixture that does not have an XLR cable attached to the DMX “Out” port will automatically terminate.

For full operation manual, see [www.kinoflo.com](http://www.kinoflo.com)

# Control Panel - Color & RGB Mode



A B C D



A B C

## Color Mode

- A) Menu:** Provides access to menu options such as General settings (**Color Mode**), Reset, DMX and DMX Wireless settings. *Tip:* While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB**).
- B) Kelvin, G/M (Green/Magenta) Gel, Hue & Saturation Preset Buttons:** Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, Gel, Hue and Saturation settings.
- C) Display:** Provides access to Dim, Kelvin, G/M, Gel, Hue/Saturation and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.
- D) Mode:** Press to navigate from Dim to Kelvin, G/M, Gel, Hue and Saturation settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. *Tip:* Long press will bring you back one step.

## RGB Mode

- A) Menu:** Provides access to menu options such as General settings (**RGB Mode**), Reset, DMX and DMX Wireless settings. *Tip:* While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB**).
- B) Kelvin, G/M (Green/Magenta) RGB (Red, Green, Blue) Preset Buttons:** Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, and RGB settings.
- C) Display:** Provides access to Dim, Kelvin, G/M, RGB and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.
- D) Mode:** Press to navigate from Dim to Kelvin, G/M, RGB settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. *Tip:* Long press will bring you back one step.

# FreeStyle LED Fixture Specifications



FreeStyle 31 LED

**CFX-F31** FreeStyle 31 LED Fixture

**Weight:** 15 lb (7kg)

**Dimensions:** 40.5 x 3.5 x 11" w/ 6.5" barndoors  
(103 x 9 x 28cm w/ 16.5cm barndoors)



FreeStyle 21 LED

**CFX-F21** FreeStyle 21 LED Fixture

**Weight:** 11.5 lb (5kg)

**Dimensions:** 26.5 x 3.5 x 13" w/ 6" barndoors  
(67 x 9 x 33cm w/ 15cm barndoors)

# Select LED Fixture Specifications



Select 30 LED

**CFX-SL30** Select 30 LED Fixture

**Weight:** 12 lb (5kg)

**Dimensions:** 40.5 x 3.5 x 11" w/ 6.5" barndoors  
(103 x 9 x 28cm w/ 16.5cm barndoors)



Select 20 LED

**CFX-SL20** Select 20 LED Fixture

**Weight:** 10 lb (4.5kg)

**Dimensions:** 26.5 x 3.5 x 13" w/ 6" barndoors  
(67 x 9 x 33cm w/ 15cm barndoors)

# LED Controller Specifications



**Select 150 LED  
DMX Controller**

**LED-150X** Select 150 LED DMX Controller

**AC Input Voltage:** 100~240VAC 50/60Hz, 150W

**Amperage VAC:** 1.25A at 120VAC, 0.65A at 230VAC

**DC Input Voltage:** 18~36VDC, 150W

**Amperage VDC:** 6.25A at 24VDC

**Kelvin Range:** 2700K~6500K (White Mode)

**Kelvin Range:** 2500K~9900K (Color Mode)

**Dimming Range:** 100%~1%

**Weight:** 4.5 lb (2kg)

**Dimensions:** 14.5 x 4 x 3"

(37 x 10 x 8cm)

*Use with FreeStyle 31/21, Select 30/20 Fixtures.*

**FCC Part 15 Verification:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

**FCC Part 15 Declaration of Conformity:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



KINO FLO, INC

Select 30, Select 20, FreeStyle 31, FreeStyle 21

ID: XRSCRMXTIMO101

IC: 8879A-CRMXT101

For full operation manual, see [www.kinoflo.com](http://www.kinoflo.com)



For latest Warranty information and Certifications,  
see Kino Flo website at [www.kinoflo.com](http://www.kinoflo.com).

**Environmental: Disposal of Old Electrical & Electronic Equipment.**



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. This product is made of recyclable materials and should be disposed of in accordance with governmental regulations.

---

Kino Flo, Inc. 2840 N. Hollywood Way, Burbank, CA 91505, USA  
Tel: 818 767-6528 website: [www.kinoflo.com](http://www.kinoflo.com)